BSA

VICTOR GRAND PRIX

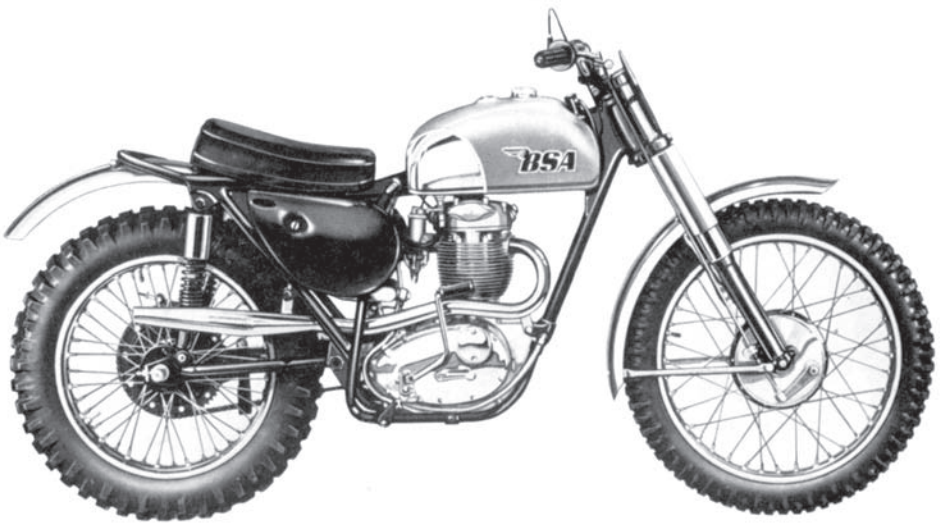

PARTS LIST
1966-67

www.bsaunitsingles.com

Victor Grand Prix parts list - B44GP

Part number	No.Off	Description
Complete assemblies		
41-500		Engine complete
41-506		Crankcase complete
41-546		Flywheel and con-rod assembly
40-3235		Clutch complete
41-600		Oil pump complete
41-4140		Frame complete
41-5101		Front fork complete
41-5534		Front wheel complete
41-5541		Front hub complete
41-6050		Rear wheel complete
41-6055		Rear hub complete
19-2367		Carburettor complete
Parts		
Cylinder head		
00-3163		Decoke gasket set
00-3304		Full gasket set
40-207		Gasket (rocker box)
40-415		Rocker box
40-182	2	Valve inspection cap washer
41-31	2	Valve inspection cap
40-418		Exhaust valve lifter 'O' ring
41-176		Exhaust valve lifter lever
2-443		Exhaust valve lifter lever nut
2-525		Exhaust valve lifter lever nut washer
15-5155		Exhaust valve lifter lever washer
40-417		Valve lifter
24-6040	2	Rocker box nut
2-923	2	Rocker box washer
40-209	7	Rocker box nut
2-525	7	Rocker box washer
40-56		Rocker box inspection cover gasket
40-208		Rocker box inspection cover
41-633		Exhaust valve guide
40-295		Rocker box inspection cover screw
41-23		Exhaust valve
40-129	3	Cylinder head stud - long
40-131	2	Cylinder head stud - short
40-127	2	Cylinder head stud - medium
66-3074	2	Cylinder head dowel
40-124	2	Cylinder head stud
65-1417		Carburettor joint washer
41-24		Inlet valve
41-26	2	Valve spring cup - bottom
41-632		Inlet valve guide
65-2494	2	Valve spring - outer
65-2495	2	Valve spring - inner
40-171	2	Valve spring collar
40-167	4	Valve spring collet
47-26		Carburettor stud, left hand
47-48		Carburettor stud, right hand
42-4476	2	Carburettor stud nut
65-1418		Carburettor joint Tufnol washer

www.bsaunitsingles.com

Cylinder head (cont)

41-664		Carburettor joint washer
41-663		Carburettor distance piece
41-635		Cylinder head
41-2728		Exhaust pipe

Cylinder and crankshaft

40-157	2	Rocker thrust washer
40-159	4	Rocker spindle nut washer
40-162	2	Rocker spindle nut
41-655		Rocker spindle oil feed pipe
40-156	2	Rocker spring washer
40-294	2	Rocker spindle
19-7621		Suppressor
19-7634		Sparking plug
66-102		Sparking plug washer
24-563	2	Rocker adjusting pin nut
40-148	2	Rocker spindle 'O' ring
40-158	4	Rocker spring thrust washer
40-292		Inlet rocker
40-296		Exhaust rocker
41-92	2	Piston ring - taper
41-98		Piston ring - scraper
41-570		Piston complete
66-954	2	Gudgeon pin circlip
41-551		Crankpin locating peg
41-554		Flywheel complete (right hand)
41-564		Engine shaft (right hand)
40-43		Flywheel plug
41-557		Flywheel complete (left hand)
41-588	2	Crankpin nut
41-586		Crankpin
41-101		Gudgeon pin
66-492		Small end bush
41-579		Engine shaft (left hand)
41-535		Cylinder
41-638		Cylinder head gasket
68-155	2	Rocker arm adjuster screw
15-152	4	Cylinder holding down nut
29-5655	4	Cylinder holding down nut washer
24-5160	2	Cylinder barrel stud nut
76-12	2	Cylinder barrel stud nut washer
41-44	2	Cylinder barrel stud
41-540	4	Cylinder holding down stud
41-539		Cylinder base gasket
41-549		Connecting rod
40-572		Big end roller cage
26-650	24	Big end rollers
41-183		Big end bush
41-546		Flywheel and con-rod assembly
41-548		Con-rod and crankpin assembly

Crankcase

40-375		Chain oiler oil pipe
40-330		Chain oiler feed union
40-228		Chain oiler bolt
40-241		Primary case back gasket
40-240		Primary case back cover plate
40-246	6	Primary case back screw

www.bsaunitsingles.com

Crankcase (cont)

40-243		Primary case back oil seal
41-673		Generator rotor key
40-705		Generator lead grommet
29-2054		Generator rotor washer
29-2053		Generator rotor nut
40-414	3	Stator plate self locking nut
19-8024		Stator
19-8019		Rotor
41-631	3	Stator plate stud
41-615		Engine sprocket (28 teeth)
40-325	A/R	Distance piece (.324/.327")
40-326	A/R	Distance piece (.309/.312")
40-327	A/R	Distance piece (.294/.297")
40-25		Crankcase oil seal
41-674		Generator lead grommet
41-506		Crankcase complete
24-732		Bearing (right hand)
41-668	2	Tappet
41-590	2	Pushrod
41-584		Camshaft
40-118		Camshaft gear key
41-560		Engine shaft key
40-455		Engine shaft lockwasher
42-5864		Engine shaft nut
41-569		Engine shaft pinion
41-567		Oil pump drive
41-565		Oil pump drive thrust washer
24-724		Bearing (left hand)

Oil pump

15-645		Gearbox oil level bolt
66-7518		Gearbox oil level bolt washer
40-3190		Gearbox drain plug
68-3168		Gearbox drain plug 'O' ring
41-3055		gearbox sprocket (16 teeth)
40-3121		Gearbox sprocket lockwasher
40-3051		Gearbox sprocket nut
2-923	7	Crankcase stud washer
2-49	7	Crankcase stud nut
40-20	2	Crankcase stud - rear
40-19	2	Crankcase stud - top
41-34	3	Crankcase bolt
41-513		Camshaft bush
2-51		Oil pump spindle gear nut
24-978		Oil pump spindle gear lockwasher
41-603		Pump driving gear
41-608		Oil pump top plate
41-602		Oil pump driving spindle
41-606		Oil pump driven spindle
41-607		Oil pump driven feed gear
41-611	2	Oil pump thrust washer
41-601		Pump body
67-1395	2	Pump mounting stud
40-414	2	Pump mounting stud nut
41-605		Oil pump scavenge gear - driven
67-1391		Oil pump cover plate
41-609	4	Oil pump body screw
2-51	4	Sump stud nut

www.bsaunitsingles.com

Oil pump (cont)

41-604		Oil pump scavenge gear - driver
29-541	4	Sump stud lockwasher
31-222	4	Sump stud
41-610		Oil pump - crankcase gasket
41-620		Sump scavenge cover
41-624		Scavenge valve
41-600		Oil pump complete

Gear cluster

40-3292		Layshaft bearing
41-3070		Layshaft 2nd pinion (22 teeth)
41-3069		Layshaft 3rd pinion (19 teeth)
40-394	2	Crankcase dowel - solid
41-3054		Mainshaft oil seal
29-3857		Mainshaft bearing
41-3061		Mainshaft top pinion (22 teeth)
40-3020	A/R	Spacer (.093/.094"))
40-3126	A/R	Spacer (.098/.099")) mainshaft
40-3127	A/R	Spacer (.103/.104"))
41-3064		Pinion (21 teeth) mainshaft 2nd
40-3019	A/R	Spacer (.075/.076")) mainshaft
40-3119	A/R	Spacer (.070/.071")) 3rd
40-3120	A/R	Spacer (.080/.081")) gear
41-3063		Mainshaft 3rd pinion (24 teeth)
41-3065		Mainshaft 1st pinion (18 teeth)
40-3254		Mainshaft
40-3007		Mainshaft - pushrod bush
40-3265		Pushrod
41-3045	2	Mainshaft top gear bush
90-6074		Felt washer
66-3074		Crankcase dowel - hollow
40-3262		Layshaft 1st gear bush
41-3073		Layshaft 1st pinion (25 teeth)
41-3078		Layshaft circlip
41-3068		Layshaft with top gear (14 teeth)
41-3074	A/R	Washer (.083/.085")) layshaft left
41-3072	A/R	Washer (.078/.080")) hand end

Gearchange mechanism and crankcase oiling system

67-1236		Crankcase dowel
40-387		Oil pressure release valve spring
67-1505		Oil pressure release valve plug
67-1498		Oil pressure release valve washer
90-241		Oil pressure release valve ball
40-3143		Gearchange plunger keeper plate screw
40-3194		Plunger retaining plate
40-3321		Gearchange quadrant
40-3059	2	Plunger spring rivet
40-3155	2	Gearchange plunger spring
40-3193	2	Gearchange plunger
40-3045		Camplate spring screw locking plate
40-3044	2	Camplate spring screw
40-3042		Camplate spring
35-709		Camplate spindle split pin
40-3043		Camplate spring plate
40-3291		Camplate spindle
40-3032		Selector fork spindle
40-3033	2	Selector fork

www.bsaunitsingles.com

Gearchange mechanism and crankcase oiling system (cont)

40-3294		Gear control camplate
40-3289		Footchange return spring anchor pin
40-3061		Gearchange quadrant return spring
75-5016		Oil union stud nut
75-137		Oil union shakeproof washer
40-24		Crankcase oil union stud
41-688		Crankcase union oil pipe
68-597	2	Oil union sealing washer
2-292		Oil union bleed screw washer
41-690		Oil union bleed screw
1-4675		Non return valve ball
40-381		Non return valve spring
40-376		Non return valve plug
2-2894		Gearbox filler plug washer
40-3064		Gearbox filler plug

Footstart and footchange - timing case

53-242		Cable grommet
40-730		Inner cover breather tube
40-222		Camshaft bush
40-28		Camshaft bush peg
41-519		Inner cover
40-229	6	Inner timing cover screw - short
40-679		Camshaft oil seal
40-235	2	Inner timing cover screw - front
2-525		Contact breaker lead clip washer
90-5268		Contact breaker lead clip
40-3270		Kickstart spindle bush
90-11		Gearbox mainshaft right hand bearing
76-528		Gearbox mainshaft bearing circlip
40-3285		Clutch lever
40-3283		Clutch operating pinion
40-3257		Mainshaft lockwasher
76-271		Mainshaft nut
40-3073		Gearchange lever
89-3208		Gearchange pedal rubber
2-1354		Gearchange pedal bolt
40-663		Outer cover
40-236	3	Outer timing cover screw
29-3319	2	Contact breaker cover screw lockwasher
54-9012	2	Contact breaker cover screw
40-684		Contact breaker cover
40-688		Contact breaker cover joint washer
40-234		Outer timing cover screw
76-546	3	Outer timing cover screw
40-228		Outer timing cover screw
2-2578		Kickstart crank cotter nut
2-2580		Kickstart crank cotter washer
2-2579		Kickstart crank cotter
41-3083		Kickstart lever
40-3084		Kickstart lever pedal bolt
41-3022		Kickstart lever pedal
42-3159		Kickstart pedal rubber
40-3281		Kickstart outer cover oil seal
40-3085		Kickstart pedal spring
1-4675		Kickstart pedal ball
76-210		Outer timing cover screw
40-3282		Clutch operating rack

www.bsaunitsingles.com

Footstart and footchange - timing case (cont)

65-2593		Clutch thrust ball
40-3273		Kickstart ratchet pinion spring
40-3272		Kickstart ratchet pinion bush
40-3271		Kickstart ratchet pinion
40-3279		Kickstart ratchet
40-3277		Kickstart quadrant stop circlip
40-3276		Kickstarter stop
40-3275		Kickstart return spring
41-3059		Kickstart spindle
40-3278		Kickstart return spring anchor pin
66-3074	2	Outer cover dowel
40-3292		Kickstart needle roller bearing
53-3049		Mainshaft oil feed plug
41-521		Inner timing cover breather pipe
41-568		Crankshaft oil seal

Clutch and primary case

40-715		Primary cover plug
40-239		Primary cover plug washer
40-234	3	Primary cover screw - long
40-229	4	Primary cover screw - short
40-245		Primary cover
40-3230		Adjuster screw
2-2395		Adjuster screw nut
40-3222		Pressure plate
40-3227		Clutch retaining nut
40-3233	4	Driving plate
40-3220	5	Driven plate
41-3212	8	Rubber buffer
41-3210		Clutch centre
40-3203		Chainwheel (52 teeth)
19-8683		Primary chain
40-3206	25	Roller
40-3201		Clutch hub
40-247		Primary cover gasket
40-3150		Clutch hub key
40-3207		Retaining plate (inner)
41-3209		Clutch spider
40-3210		Retaining plate (outer)
40-3211	4	Spring screw
40-3234		Retaining nut washer
40-3221		Retaining nut lockwasher
40-3218	4	Spring cup
41-3091	4	Spring
41-3215	4	Spring nut
40-740	2	Chaincase oil level and drain screw washer
40-248	2	Primary chaincase oil level and drain screw
40-3235		Clutch complete

Frame

41-4140		Frame complete
40-715		Oil filler cap
40-239		Oil filler cap washer
41-4182		Baffles
66-4149	2	Bearing cup
41-8337		Oil breather pipe
41-8332		Rocker feed 'T' top tube front oil pipe
40-6030	2	Engine steady stay/frame and bracket bolt

www.bsaunitsingles.com

Frame (cont)

41-658		Oil pipe 'T' piece
2-49	2	Bracket/cylinder head nut
36-382	2	Bracket/cylinder head washer
41-8333		Engine/rocker feed 'T'oil pipe
41-8336		Header tank/top tube rear oil pipe
29-7971	2	Oil tank filter plug washer
29-7994		Oil tank filter plug banjo connector
29-7962		Oil tank filter plug
41-150		Engine steady stay
41-175		Exhaust valve lifter and engine steady stay bracket
42-4475	2	Engine steady stay/frame and bracket nut
42-4475		Engine bolt nut
68-4240		Engine bolt (front)
42-8024		Oil pipe/frame down tube clip
41-8334		Header tank/front down tube oil pipe
41-8335		Oil pipe spring casing
42-4475	2	Engine stud nut
40-157	2	Engine stud washer
2-2138		Engine stud spacer
41-4191		Engine stud
41-8338	9	Oil pipe clip
41-8332		Engine oil feed oil pipe
31-68		Engine bolt (rear)
27-5676	2	Engine bolt washer
41-4180	2	Engine plate
27-5676		Engine bolt washer
42-4475		Engine bolt nut
53-59	2	Engine plate/frame bolt
2-537	2	Engine plate/frame washer
42-4476	2	Engine plate/frame nut

Swinging arm and rear brake control

90-7029		Brake rod adjustor nut
65-6274		Brake rod swivel pin
15-1312		Brake rod spring
21-5102		Brake rod spring nut
42-4475	2	Damper top/frame nut
2-1733	2	Damper top/frame washer
41-7024		Brake rod
40-7023		Brake pedal fulcrum pin
2-510		Brake rod toggle end screw
41-7029		Brake pedal
2-443		Brake rod toggle end nut
24-5860		Brake pedal fulcrum pin nut
41-4848		Footrest (left hand)
41-4849		Footrest (right hand)
41-4841		Footrest stud
66-4708		Brake pedal fulcrum pin washer
2-1967	2	Footrest stud washer
40-4244		Swinging arm spindle
2-1925	2	Footrest stud nut
40-6910	2	Damper top/frame bolt
36-382		Swinging arm spindle securing lockwasher
67-8313		Swinging arm spindle securing bolt
19-7428	2	Rear damper spring
19-5305	2	Rear damper Silentbloc (upper)
19-5307	2	Rear damper Silentbloc (lower)
19-7427	2	Damper complete

www.bsaunitsingles.com

Swinging arm and rear brake control (cont)

2-449	2	Damper bottom/swinging arm nut
41-4220		Swinging arm
40-4241	2	Swinging arm Silentbloc
42-4364		Swinging arm spindle washer
42-4343		Swinging arm spindle nut

Engine shield, megaphone, air cleaner

68-9226	2	Side cover fixing rubber washer
41-4605		Side cover (left hand)
41-4606		Side cover (right hand)
41-7853	2	Air cleaner top/frame bolt
29-541	2	Air cleaner top/frame washer
66-1849	2	Air cleaner top/frame distance piece
41-7841		Air cleaner/carburettor intake connector
47-7816		Connector clip
2-1354		Air cleaner/fixing strap bolt
29-541		Air cleaner/fixing strap washer
27-8560		Air cleaner/fixing strap washer
41-7824	2	Air cleaner element
41-7825	2	Air cleaner element cover
35-32	2	Element retaining washer
42-6554	2	Element retaining bolt
2-49	2	Engine shield front/frame bracket nut
36-382	2	Engine shield front/frame bracket washer
40-2021		Engine shield
68-8313	2	Engine shield front/frame bracket bolt
90-3063		Exhaust pipe clip 'T' bolt
42-3249	4	Engine shield 'U' bolt nut
40-2010		Engine shield 'U' bolt (left hand)
40-2012		Engine shield 'U' bolt (right hand)
90-3061		Megaphone/exhaust pipe clip
40-2814		Megaphone
90-3064		Exhaust pipe clip swivel
21-5102		Exhaust pipe clip nut
2-46		Megaphone/frame nut
2-51		Megaphone/frame washer
2-803		Megaphone/frame bolt
41-4604		Air cleaner body
68-9223	2	Side cover fixing Oddie stud
41-4610		Air cleaner front fixing bracket
15-5155	2	Bracket/frame washer
2-49	2	Bracket/frame nut
67-8313	2	Bracket/frame bolt

Front fork

68-5056	4	Handlebar clamp bolt
40-5018		Steering stem cap
15-5155	4	Handlebar clamp washer
65-5333	2	Handlebar clamp
64-6016		Top yoke clip nut
40-5114		Top yoke
40-5145		Steering head cap
40-5143		Steering head top cone
89-5015	40	Ball
40-5144		Steering head bottom cone
41-5109		Bottom yoke
65-5295		Fork end bolt
2-2903		Fork end washer

www.bsaunitsingles.com

Front fork (cont)

41-5103		Sliding tube (left hand)
41-5112	2	Bottom yoke Allen screw
65-5424	2	Fork top bearing
27-5135		top yoke clip bolt
68-5134	2	Top bearing spacer
65-5451	2	Oil seal
41-5142	2	Oil seal holder
41-5121	2	Fork spring cover washer
41-5120	2	Spring cover
41-5124	2	Damper tube
41-5105		Sliding tube (right hand)
2-292	2	Drain plug washer
41-5141	2	Drain plug
41-5138	2	Fork damper tube Allen screw
40-414	2	Damper valve seat nut
41-5134	2	Damper valve seating
41-5139	2	Fork damper valve
41-5140	2	Damper valve collar
41-5144	2	Damper tube bush
41-5128	2	Fork damper rod
2-49	2	Damper rod nut
41-5135	2	Damper tube bush circlip
41-5143	2	Damper tube bush circlip
41-5129	2	Fork shaft top nut
65-5332	2	Fork shaft top washer
41-5115	2	Front fork shaft
65-5390	2	Front fork spring
41-5137	2	Front fork bush (lower)
29-5338	2	Fork shaft plug washer
41-5130	2	Fork shaft plug
41-5145	2	Fork damper tube washer

Front wheel

35-701	2	Lock ring split pin
67-5561		Hub bearing lock ring (left hand)
41-6016	2	Front hub bearing
65-5884	2	Hub bearing thrust washer
27-6808	40	Wheel spoke nipple
41-5538	20	Spoke (long)
41-5537	20	Spoke (short)
28-2080		Front hub grease nipple
19-7716	2	Brake shoe lining
35-6436	14	Brake shoe lining rivet
65-5899		Fulcrum pin
41-5543		Cover plate
24-8045		Fulcrum pin lockwasher
24-5860		Fulcrum pin nut
41-5546		Brake cam boss
68-582	2	Cam boss/cover plate washer
41-5547	2	Cam boss/cover plate bolt
41-5549		Brake cam distance piece
65-5907		Brake cam lever
2-440		Brake lever/cam nut
66-4708		Brake lever/cam lockwasher
15-431		Brake lever/cam washer
90-262		Cam boss grease nipple washer
28-2080		Cam boss grease nipple
24-6040	2	Cam boss/cover plate nut

www.bsaunitsingles.com

Front wheel (cont)

65-5905		Cam spindle
67-5562		Hub bearing lock ring (right hand)
67-5565		Hub spindle sleeve
65-5901	2	Brake shoe
65-5904	2	Brake shoe spring
41-5541		Hub complete
41-5535		Rim (WM1-20)
29-5971		Hub spindle
41-5534		Wheel complete

Rear wheel

68-6066		Hub fixed spindle nut
2-440		Brake lever/brake cam nut
66-4708		Brake lever/brake cam washer
15-431		Brake lever/brake cam washer
42-4475		Brake anchor strap nut
2-2138		Brake anchor strap washer
42-6045		Operating lever
29-6110		Brake anchor strap bolt
28-2080		Cover plate grease nipple
41-7026		Anchor strap
41-6061		Cover plate
41-6076		Brake shoe - trailing
41-6073		Brake shoe - leading
19-7711	2	Brake lining
40-6032		Brake cam
41-6017		Brake drum bearing
41-6058		Brake drum
41-6070		Chainwheel (60 teeth)
19-8680		Chain
42-6019		Driving flange
2-452	6	Hub and drum securing nut
67-6038	6	Hub and drum securing bolt
67-6204	10	Chainwheel/brake drum bolt
24-8784	10	Chainwheel/brake drum lockwasher
67-6039	3	Hub and drum securing bolt locking plate
41-6065		Fulcrum pin
41-6078	2	Brake shoe pivot pad
42-5841	2	Brake shoe spring
42-5840	16	Brake shoe lining rivets
2-1967		Fulcrum pin washer
24-7000		Fulcrum pin nut
40-6033	2	Adjuster
40-6040	2	Adjuster cap
2-923	2	Adjuster washer
42-4476	2	Adjuster nut
67-6033		Brake drum bearing shim
67-6034		Brake drum bearing retainer
41-6032		Hub fixed spindle
65-5885		Hub bearing retaining ring
41-6016	2	Hub bearing
65-5884		Hub bearing thrust washer
67-6051		Hub shell rubber washer
41-6055		Hub complete
42-6011	20	Spoke (left hand)
27-6810	40	Spoke nipple
42-6012	20	Spoke (right hand)
42-6371		Rim (WM3-18)

www.bsaunitsingles.com

Rear wheel (cont)

67-6027		Hub spindle sleeve
67-6133		Hub end cover
65-5890		Hub spindle distance piece (short)
67-6028		Hub spindle distance piece (long)
41-6080		Hub spindle
41-6050		Rear wheel complete

Mudguards

66-9049	2	Front number plate fixing rubber strap
41-5150		Number plate
41-6532		Front mudguard
42-6505		Front mudguard centre stay
3-1156	4	Centre stay/fork sliding tube bolt
2-370		Bottom stay/fork end distance piece (right hand)
2-1934		Bottom stay/fork end bolt (right hand)
40-6570		Bottom stay
2-923	2	Bottom stay/fork end washer
36-382	2	Bottom stay/fork end spring washer
2-1616	2	Bottom stay/fork end nut
36-382	4	Centre stay/fork sliding tube spring washer
42-4476	4	Centre stay/fork sliding tube nut
15-7354		Bottom stay/fork end bolt (left hand)
40-414	4	Front mudguard/stay nut
27-8560	4	Front mudguard/stay washer
2-204	4	Front mudguard/stay bolt
40-6022	2	Rear mudguard fixing bolt (rear)
40-6790	4	Rear mudguard fixing washer (rear)
41-6787	4	Rear mudguard fixing rubber washer (rear)
41-6785		Rear mudguard
42-4476	2	Rear mudguard fixing nut (rear)
15-7354	2	Rear mudguard fixing bolt (front)
2-923	2	Rear mudguard fixing washer (front)
42-4476	2	Rear mudguard fixing nut (front)

Petrol tank, handlebar, seat

8-5050	2	Clutch and front brake lever cover
40-8615		Clutch cable
40-8587		Brake cable
40-8538		Brake lever
19-9502		Twist grip
40-8583		Throttle cable
40-4962		Handlebar
41-8045		Petrol tank front mounting rubber
41-8047		Petrol tank front bracket
42-8013	2	Petrol tank anti-roll rubber
24-8784	2	Petrol tank bracket washer
21-5853	2	Petrol tank bracket bolt
41-8054		Petrol pipe
24-8504		Petrol tap filter fibre washer
27-8443		Petrol tap filter
2-930		Petrol tap filter fibre washer
65-8171		Petrol tap
41-8046		Petrol tank rear mounting rubber
2-49		Seat fixing bracket front nut
24-8784		Seat fixing bracket front washer
40-414	2	Seat fixing bracket nut
2-923		Seat fixing bracket front washer
24-6770		Seat fixing bracket front bolt

www.bsaunitsingles.com

Petrol tank, handlebar, seat (cont)		
41-9089		Seat fixing bracket
41-9104		Fixing bracket plate
42-4476	2	Seat fixing rear nut
41-9105		Seat fixing rear plate
41-9085		Seat
41-8043		Petrol tank
40-8105		Petrol tank/frame bolt
40-8066		Petrol tank/frame distance tube
29-5655		Petrol tank/frame washer
42-8017		Petrol tank/frame rubber bush
2-923		Petrol tank/frame washer
68-8014		Petrol tank/frame nut
41-8053		Petrol tank filler plug
41-8548		Exhaust lifter cable
42-8611		Exhaust lifter control
19-9503		Dummy grip
40-8539		Clutch lever
53-4227		Petrol tank fixing hole plug
2-510		Brake lever/toggle screw
29-5871		Front brake cable toggle
2-1462		Brake lever/toggle washer
2-443		Brake lever/toggle nut
41-8050		Transfer (petrol tank top)
41-8051		Transfer (petrol tank side)

Electrical equipment, tools			Makers number
40-9083		Double ended spanner	
40-9021		Screwdriver (Phillips)	
40-9016		Ring spanner	
54-9234		Double ended spanner	
40-9017		Box spanner	
65-9282		Toolbag	
29-9252		Tyre lever	
54-9236		Screwdriver	
40-9075		Tappet spanner	
29-9253		Tommy bar	
36-7273		Feeler gauge (.008")	
65-9125		Feeler gauge (.010")	
24-8957		Tommy bar	
41-9099		Allen key	
67-9023		Box spanner	
19-8301		Screwdriver	
65-9110		Ring spanner	
41-7808	2	Coil/frame bolt	
68-9153		Coil retainer clip	
68-9152		Coil retainer	
19-1711		Coil	45149B
2-1462	2	Coil/frame washer	
2-2395	2	Coil/frame nut	
19-1778		Contact breaker	54415296
68-331		Cam spindle washer	
19-1779		Auto advance unit	54415746
40-682	2	Contact breaker washer	
40-683	2	Contact breaker pillar bolt	
76-290		Cam spindle bolt	
19-1684		Contact set	54415803
19-1685		Condensor	425377
19-1777		Ignition harness	54938164

www.bsaunitsingles.com

Electrical equipment, tools (cont)			Makers number
		Auto advance cam	54415053
	2	Auto advance spring	54415640
	2	Auto advance weight	54440031
		Sleeve and action plate	54415749

Note: where no BSA part number is quoted, the part is only available from the makers.

Carburettor			Makers number
19-3045		Petrol supply banjo bolt	376-091
19-3048		Petrol supply filter	376-093
19-2853		Float needle	376-089
19-2810		Primer body	343-011
19-7108		Carburettor flange 'O' ring	244-1048
19-3050	*	Throttle slide (3½)	389-060
19-2579		Throttle needle clip	4-230
19-2865		Throttle needle	389-063
19-3043		Pilot air screw	332-017
19-3044		Throttle adjusting screw	376-068
19-3049		Carburettor body	389-003
19-2854		Float	376-083
19-3046	*	Main jet (310cc)	376-100
19-2860		Throttle needle jet	376-072
19-3047		Jet holder fibre washer	376-074
19-2857		Float chamber cover gasket	376-078
19-2855		Float chamber cover	376-077
19-2856	3	Float chamber cover screw	376-079
41-665		Carburettor top cover	
		Float spindle bush	376-094
		Float needle seating	376-088
		Float chamber primer	376-086
		Primer spring	376-087
		Carburettor body peg	376-070
		Throttle slide spring	389-061
		Carburettor top	389-107
		Carburettor cap spring	29-201
		Cap spring retaining bolt	4-137A
		Cap spring retaining screw	4-241
		Carburettor top cap	389-065
		Jet block	389-057
		Jet block fibre washer	376-067
		Pilot air screw spring	4-148
		Throttle adjusting screw spring	376-069
		Pilot jet	376-076
		Pilot jet fibre washer	116-162
		Pilot jet retaining nut	376-095
		Float spindle	*376-085
		Main jet cover nut	376-075
		Jet holder	376-073

* state size

Note: where no BSA part number is quoted, the part is only available from the makers.

www.bsaunitsingles.com