CE824/64

This publication combines Spares List CE827 and incorporates NVS 2041, 2053, 2070 and 2078 which should be destroyed.

LUCAS

QUALITY EQUIPMENT AND SPARE PARTS

1964 - ARIEL & B.S.A.

MOTOR CYCLES AND SCOOTERS

JOSEPH LUCAS (Sales & Service) LIMITED

BIRMINGHAM 18 · ENGLAND

Compiled by Parts Publications, Technical Records Department, Joseph Lucas (Sales and Service) Ltd., Great Hampton Street, Birmingham 18

© Printed in England

www.bsaunitsingles.com

EQUIPMENT SPECIFICATIONS AND PAGE INDEX

ARIEL MOTOR CYCLES

UNIT	For details or illustrations see Page No.	200 c.c. 'Arrow' 250 c.c. 'Arrow' 250 c.c. 'Super' Sports Arrow'		250 c.c. 'Leader'	
		Model	Part No.	Model	Part No.
ALTERNATOR	4	RM18	54021025	RM18	54021025
AMMETER	5	CZU27	36084F	CZU27	36084F
BATTERY	–	MLZ9E	54028263	MLZ9E	54028263
CABLE HARNESS	10	—	54932231	—	54932234
COIL IGNITION	4	MA6	45152B	MA6	45152B
CONTACT BREAKER	4	4CC	425379	4CC	425379
FLASHER UNIT	8	—	—	FL5	‡35013A
HORN	8	8H	*70178A (70163)	8H	*70178A (70163)
HORN PUSH	9	HP26	*76234A (76200)	HP26	*76234A (76200)
INSPECTION LAMP SOCKET	8	—	—	—	*39517B (301187)
LAMPS					
Flasher	8	—	—	628	‡53733D
Head					
Home	6 & 7	MCH56	58892B	MCF575P	58897A
Export Europe, except France	6 & 7	MCF575P	58976A	MCF575P	58396A
Later	6 & 7	—	—	MCF575P	58898A
Export, France	6 & 7	MCH56	58896B	MCF575P	58899A
Stop Tail, Number Plate Illumination and Reflex	8	564	53394B	564	53394B
RECTIFIER	4	2DS506	49072A	2DS506	49072A
SWITCHES					
Dipper	9	99	*31549B (31482)	99	*31549B (31482)
Flasher	9	—	—	52SA	31823A
Ignition	9	88SA	34427A/B	88SA	34427A/B
Cover	9	—	†54336178	—	†54336307
Lighting	9	88SA	34289A	88SA	34289A
Knob	9	—	†54330934	—	†54330662
Neutral gear indicator	9	68SA	‡31820A	68SA	‡31820A
Stop Lamp, front brake	9	—	—	22B	*31384B (54033235)
Stop Lamp, rear	9	22B	54033234	22B	54033234
WARNING LIGHTS					
Flasher	10	—	—	WL13	‡38193A
Neutral gear indicator	10	—	—	WL13	‡38194A

* When ordering, quote part number shown in brackets. † Order separately. ‡ Optional extra.

B.S.A. SCOOTERS

UNIT	For details or illustrations see Page No.	B1 175 c.c.		B2 250 c.c. (6 volt)		B2S 250 c.c. (12 volt)	
		Model	Part No.	Model	Part No.	Model	Part No.
ALTERNATOR	4	—	—	5AF	047540	5AF	54021000
BATTERY	–	MLZ9E	54028263	MLZ9E	54028263	MLZ9E	54028263
CABLE HARNESS	10	—	—	—	54934998	—	54941657
COIL IGNITION	4	—	—	MA6	45152A/B	MA12	45101A
CONTACT BREAKER	4	—	—	4CA	47583B	4CA	47583B
HORN	8	8H	70166A/B	8H	70166A/B	8H	70177A
HORN PUSH AND DIPPER	9	—	—	25SA	31563D	25SA	31563D
LAMPS							
Head							
Home	5	—	—	MCF575P	58975A	MCF575P	58421D
Export, Europe, not France	5	—	—	MCF575P	58976A	MCF575P	58422D
Export, France	5	—	—	—	—	MCF575PEF	58423D
Export, U.S.A.	5	—	—	MCF575	59004A	MCF575	58424B
Stop Tail	8	—	—	564	53432B	564	53454B
Stop Tail, U.S.A.	8	—	—	679	53972A/B	—	—
RECTIFIER	4	—	—	2DS506	49072	FSX1849	47128B
STARTING MOTOR	5	—	—	—	—	M3	*26501E (54025006)
SUPPRESSOR	9	—	—	WS5	78106A	WS5	78106A
SWITCHES							
Ignition	9	—	—	88SA	34427A/B	63SA	54033027
Knob or Cover (order separately)	9	—	—	—	54336308	—	54331351
Lighting	9	—	—	88SA	34289A	63SA	54033028
Knob (order separately)	9	—	—	—	54331482	—	54331482
Stop Lamp	9	—	—	22B	*31437B (54033234)	22B	*31437B (54033234)
Starter Motor	9	—	—	—	—	4SA	*76463A (76442)
WARNING LIGHTS	10	—	—	WL13	38198E	WL13	*38197E (38118)
REAR SUSPENSION UNIT (Serviced by Girling Ltd.)	–	—	3950(SB4)	—	3950(SB4)	—	3950(SB4)

* When ordering, quote part number shown in brackets

www.bsaunitsingles.com

EQUIPMENT SPECIFICATIONS AND PAGE INDEX

B.S.A. MOTOR CYCLES

UNIT	For details or illustrations see Page No	Bantam D1 and Bantam Super D7		C15 250 c.c. Star, C15SS80 250 c.c. Sports Star		C15S and C15T 250 c.c. Competition		B40 350 c.c. Star B40SS90 350 c.c. Sports Star	
		Model	Part No.	Model	Part No.	Model	Part No.	Model	Part No.
ALTERNATOR	4	—	—	RM18	54021025	RM19	54021039	RM19	54021023
AMMETER	5	—	—	CZU27	36084F	—	—	CZU27	36084F
BATTERY	–	PUZ5E-11	24082094	MLZ9E	54028263	—	—	MLZ9E	54028263
CABLE HARNESS	10	—	—	—	54932275	—	¶54933943	—	54932275
CABLE HARNESS	10	—	—	—	—	—	‖54933944	—	—
COIL IGNITION	4	—	—	MA6	45152A/B	3ET	45149B	MA6	45152A/B
DISTRIBUTOR	4	—	—	15D1	40867A	15D1	40868A	15D1	40867A
HORN	8	—	—	8H	70169A/B	—	—	8H	70169A/B
HORN PUSH or MAGNETO CUT-OUT	9	—	—	—	—	4A	‡76204D	—	—
LAMPS									
Head									
Home and Export, vertical dip	6 & 7	—	—	MCF575P	58234D	MCH66	58395F	MCF575P	58234D
Export Europe, except France	6 & 7	—	—	MCF575P	58392A	—	—	MCF575P	58392A
Export, France	6 & 7	—	—	MCF575P	58391A	—	—	MCF575P	58391A
Stop tail, number plate and reflex	8	—	—	564	53394B	564	‡53432B	564	53432B
Stop tail, number plate and reflex, U.S.A.	8	—	—	679	53972A/B	—	—	679	53972A/B
Tail, number plate and reflex	8	—	—	—	—	564	‡53825A	—	—
RECTIFIER	4	—	—	2DS506	49072A	—	—	2DS506	49072A
SWITCHES									
Dipper	9	—	—	—	—	PS9	‡‡31620E	—	—
Engine cut-out	9	—	—	—	—	4A	76204D	—	—
Ignition	9	—	—	88SA	34427A	—	—	88SA	34427A
Cover	9	—	—	—	†54336178	—	—	—	†54336178
Lighting	9	—	—	88SA	34289A	PS6	‡‡31356A/B	88SA	34289A
Knob	9	—	—	—	†54330934	—	—	—	†54330934
Escutcheon plate	9	—	—	—	†54330485	—	—	—	†54330485
Stop lamp	9	—	—	6SA	31827A	—	—	6SA	31827A
REAR SUSPENSION UNITS (Serviced by Girling Ltd.)	–	—	3983(SC3)	—	*3974(SC2-6)	—	**4545(SB4)	—	§4404(SC3)
	–	—	—	—	°4445(SB3)	—	°°4445(SB3)	—	*4445(SB3)

† Order separately. * C15 only. ° C15SS80 only. ¶ With lights. ‖ Ignition only. ‡ Optional. ‡‡ Part of headlamp. ** C15S only. °° C15T only. § B40 only. * B40SS90

B.S.A. MOTOR CYCLES (contd.)

UNIT	For details or illustrations see Page No.	A50 500 c.c. Star Twin A65 650 c.c. Star Twin 6 volt		A50 500 c.c. 'Cyclone' A65 650 c.c. 'Spitfire-Hornet' Export only		A65 650 c.c. Twin Star 12 volt		A65 650 c.c. 'Lightning Rocket' (Export Only). A65R 650 c.c. 'Rocket'	
		Model	Part No.	Model	Part No.	Model	Part No.	Model	Part No.
ALTERNATOR	4	RM19	54021023	RM19	54021056A	RM19	54021023	RM19	54021023
AMMETER	5	2AR	36296A	—	—	2AR	36296A	2AR	36296A
BATTERY	–	MLZ9E	54028263	—	—	MKZ9E	54028050	MLZ9E	54028263
CABLE HARNESS	10	—	54932262	—	¶54935006	—	54932262	—	54934657
CABLE HARNESS	10	—	—	—	‖54934952	—	—	—	—
COIL IGNITION	4	MA6	45077E	3ET (L.H.)	45150A	MA12	45110A/D	MA6	45077E
				3ET (R.H.)	45149B				
Later	4	MA6	45152A/B	—	—	—	—	MA6	45152A/B
CONDENSER	4	—	—	—	54441582	—	—	—	—
CONTACT BREAKER	4	4CA	47583A/B	4CA	47612A	4CA	47583A/B	4CA	47583A/B
DIODE ZENER	4	—	—	—	—	ZD715	49345	—	—
HORN	8	8H	70169A/B	—	—	8H	70164A/B	6H	70161E
HORN PUSH	9	—	—	4A	76204A/D	—	—	—	—
LAMPS									
Head									
Home and Export, dip left	6 & 7	MCF700P	59140A	—	—	MCH700P	59174A	—	—
Home and Export, vertical dip	6 & 7	MCF700P	59141A	MCH66	58395F	—	—	MCH61	*59171A
Home and Export, vertical dip	6 & 7	—	—	—	—	—	—	MCH61	§59137A
Export Europe, except France	6 & 7	MCF700P	59142A	—	—	—	—	—	—
Export, France	6 & 7	MCF700P	59143A	—	—	—	—	—	—
Stop tail, number plate and reflex	8	564	53394B	679	53972A/B	564	53454B	564	53432B
Stop tail, number plate and reflex, U.S.A.	8	679	53972A/B	—	—	—	—	679	53972A/B
RECTIFIER	4	2DS506	49072A	—	—	2DS506	49072A	2DS506	49072A
SWITCHES									
Dipper	9	—	—	PS9	‡‡31620A/E	—	—	—	—
Engine cut-out	9	—	—	SS5	31071D	—	—	—	—
Ignition	9	88SA	34427A	—	—	88SA	34427A/B	88SA	34427A/B
Cover	9	—	†54336178	—	—	—	†54336178	—	†54336178
Lighting	9	88SA	34289A	PS6	‡‡31356A/B	88SA	34289A	88SA	34289A
Knob	9	—	†54330934	—	—	—	†54330934	—	†54330934
Escutcheon plate	9	—	†54330485	—	—	—	†54330485	—	†54330485
Stop lamp	9	6SA	34448B	6SA	34448A/B	6SA	34448A/B	6SA	34448A/B
REAR SUSPENSION UNITS (Serviced by Girling Ltd.)	–	—	4394(SB4)	—	4394(SB4)	—	4394(SB4)	—	—

† Order separately. ¶ With lights 'Cyclone' only. ‖ Ignition only. ‡‡ Part of headlamp. * With speedo aperture. § Less speedo aperture. L.H. Left hand. R.H. Right hand.

www.bsaunitsingles.com

ALTERNATORS AND RECTIFIERS

Part No. / Model	‡54021025 RM18	‡54021023 RM19	‡54021039 RM19
Stator	47161	47164A	47173
Rotor	54213903	54213901	54213901
Rectifier	†49072	†49072	—
Rectifier, fixing nut	†156594	†156594	—

Part No. / Model	‡54021056 RM19	‡047540D 5AF	‡54021000 5AF
Stator	47188	47105	47135A
Rotor	54213901	54210940	54210946
Rectifier	—	†49072	†47128A
Rectifier, fixing nut	—	†156594	—

CONTACT BREAKER UNITS

Part No. / Model	425379 4CC	47583A/B 4CA	47612A 4CA
Cam	—	54440029	54415053
Weights, auto advance	—	54440031	54440031
Sleeve and action plate	—	54440032	54416124
Spring set, auto-advance	—	54413020	54415641
Contact set	54415803	54415803	54415803
Condenser	425377	425377	425377
Nut, fixing condenser angle plate	169194	169194	169194

DISTRIBUTORS

Part No. / Model	40867A 15DI	40868A 15DI
Cover	54411737	54411737
Screw, fixing cover	54120019	54120019
Condenser	421327	421327
Contact set	421106	421106
Cam	421206	54415051
Spring set, auto-advance	54412018	54412018
Weight, auto-advance	421056	421056
Shaft and action plate	421054	421054
Bracket, cover	54411736	54411736
Sundry parts, set	54412407	54412407

IGNITION COILS

Part No. / Model / Part No. / Model	45077E MA6	45101A MA12	45110A/D MA12	45149B 3ET
Grommet, rubber	421554	421554	421554	—
Clip, cable contact	421863	421863	421863	—
Nut, terminal	166043	166043	166043	—
Clip, coil retaining	—	—	—	54441104
Lamination	—	—	—	54441946
Connector, double, male, Lucar	—	—	54190108	864980
Connector, female, Lucar	—	—	—	54942078
Sleeve, Lucar	—	—	—	54190042

Part No. / Model	45150A 3ET	45152B MA6
Grommet, rubber	—	421554
Clip, cable contact	—	421863
Nut, terminal	—	166043
Clip, coil retaining	54441104	—
Lamination	54441946	—
Connector, double, male, Lucar	864980	54190108
Connector, female, Lucar	54942078	—
Sleeve, insulating, Lucar	54190042	—

† Order Separately
‡ For reference only, serviced by Rotor and Stator.

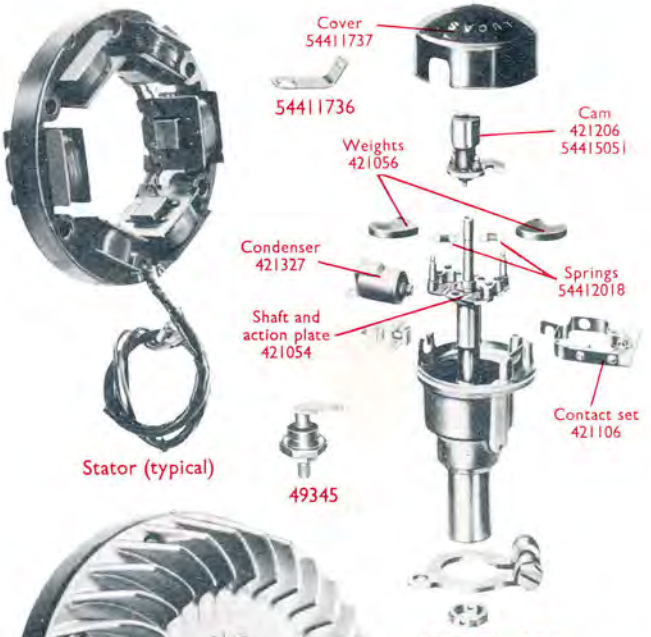

www.bsaunitsingles.com

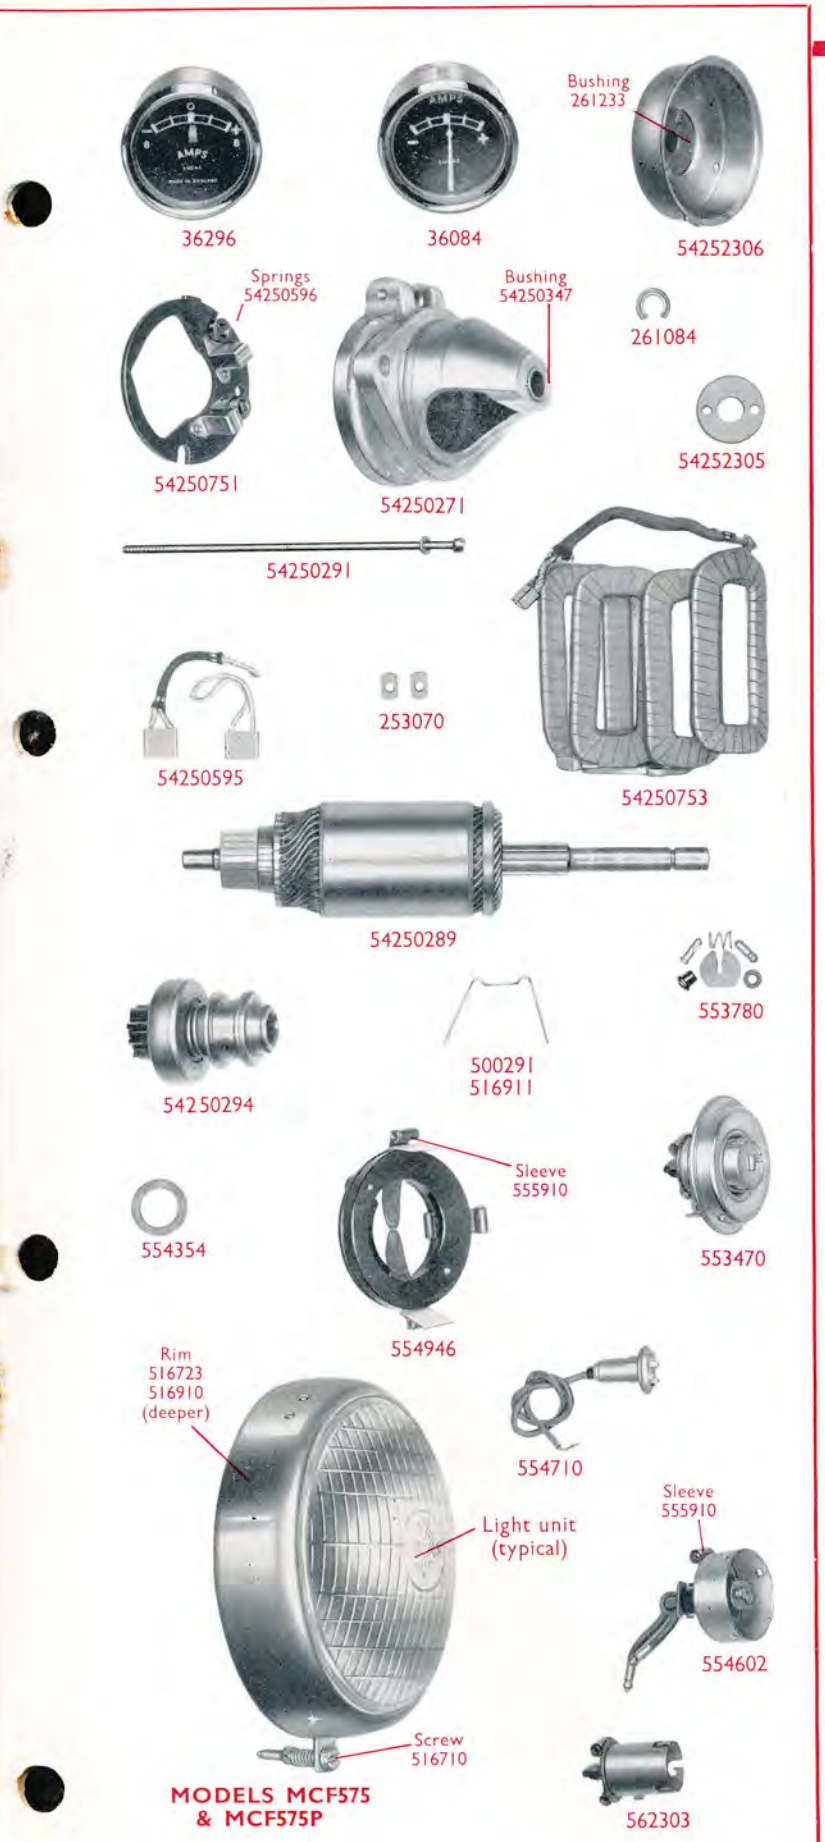

AMMETERS

Part No.	36084F	36296A
Model	CZU27	2AR
Ring, rubber	523986	—
Nut, terminal	166043	166043
Washer, terminal	185040	185040

STARTING MOTOR

Part No.	26501E
Model	M3
Bolt through fixing	54250291
Bracket, fixing	54250271
Bushing, bracket	54250347
Shoe, operating lever	253070
Circlip, armature location	261084
Drive	54250294
Armature	54250289
Washer, brake	54252305
Brush set	54250595
Bracket or frame, commutator end	54252306
Bushing bracket	261233
Plate, with brush holder and springs	54250751
Springs, set brush tension	54250596
Coils, field	54250753
Sundry parts set	54251434

HEADLAMPS (SCOOTER)

Part No.	58421D	58422D	58424B
Model	MCF575P	MCF575P	MCF575
Rim or door	516723	516723	516723
Screw, fixing rim	516710	516710	516710
Light unit	516767	516658	516659
Wire, fixing light unit	500291	500291	500291
Bulbholder	554946	554946	554946
Sleeve terminal	555910	555910	555910
Bulbholder, pilot	554710	554710	—
Interior, pilot	553780	553780	—
Ring, rubber seating	554354	554354	—
Bulb, main	425	350	425
Bulb, pilot	989	989	—

Part No.	58975A	58976A	59004A
Model	MCF575P	MCF575P	MCF575
Rim or door	516723	516723	516723
Screw, fixing rim	516710	516710	516710
Light unit	516828	516829	54520452
Wire, fixing light unit	500291	500291	500291
Bulbholder	554602	554602	554602
Sleeve terminal	555910	555910	555910
Bulbholder, pilot	554710	554710	—
Interior, pilot	553780	553780	—
Ring, rubber seating	554354	554354	—
Bulb, main	312	377	312
Bulb, pilot	988	988	—

Part No.	58423D
Model	MCF575P
Rim or door	516910
Light unit	516912
Wire, fixing light unit	516911
Backshell	553470
Bulbholder	562303
Bulb, pilot	989

www.bsaunitsingles.com

HEADLAMPS

MCF 575 and MCF 575P models

Part No. / Model	58234D MCF575P	58391A MCF575	58392A MCF575P
Rim or door	534343	534343	534343
Wire, fixing light unit	504665	504665	504665
Screw, fixing rim	144921	144921	144921
Light unit	516828	516912	516829
Bulbholder, main	554602	553470	554602
Sleeve, terminal	555910	555910	555910
Bulbholder, pilot	554710	554710	554710
Interior bulbholder	553780	553780	553780
Bulb, main	312	—	377
Bulb, pilot	988	988	988

Part No. / Model	58396A 58898A MCF575P	58897A MCF575P
Rim or door	54520003	54520003
Wire, fixing light unit	504665	504665
Screw, fixing rim	555911	555911
Light unit	516829	516828
Bulbholder, main	554602	554602
Sleeve, terminal	555910	555910
Bulbholder, pilot	554710	554710
Interior bulbholder	553780	553780
Ring, seating bulbholder	554354	554354
Bulb, main	377	312
Bulb, pilot	988	988

Part No. / Model	58899A MCF575P	58976A MCF575P
Rim or door	54520003	516723
Wire, fixing light unit	504665	500291
Screw, fixing rim	555911	516710
Light unit	516912	516829
Backshell	553470	—
Bulbholder, main	†562303	554602
Sleeve, terminal	555910	555910
Bulbholder, pilot	554710	554710
Interior Bulbholder	553780	553780
Ring, seating bulbholder	554354	554354
Bulb, main	—	377
Bulb, pilot	988	989

MCH 56 models

Part No. / Model	58892B MCH56	58896B MCH56
Rim or door	534343	534343
Wire, fixing light unit	504665	504665
Screw, fixing rim	144921	144921
Ammeter	¶36084	¶36084
Switch, lighting	‡34289	‡34289
Knob, lighting switch	‡54330934	‡54330934
Switch, ignition	‡34427	‡34427
Cover, ignition switch	‡54336178	‡54336178
Light unit	54520858	516912
Backshell	—	552943
Bulbholder, main	554602	*562303
Sleeve, terminal	555910	555910
Bulbholder, pilot	554710	554710
Interior bulbholder	553780	553780
Ring, seating bulbholder	554354	554354
Screw, fixing lamp	112201	112201
Grommet, cable entry	199005	199005
Washer, cable grip	516285	516285
Bulb, main	312	—
Bulb, pilot	988	988

† Part of 553470 ¶ See page 5 for details ‡ See page 9 for details
* Part of 552943

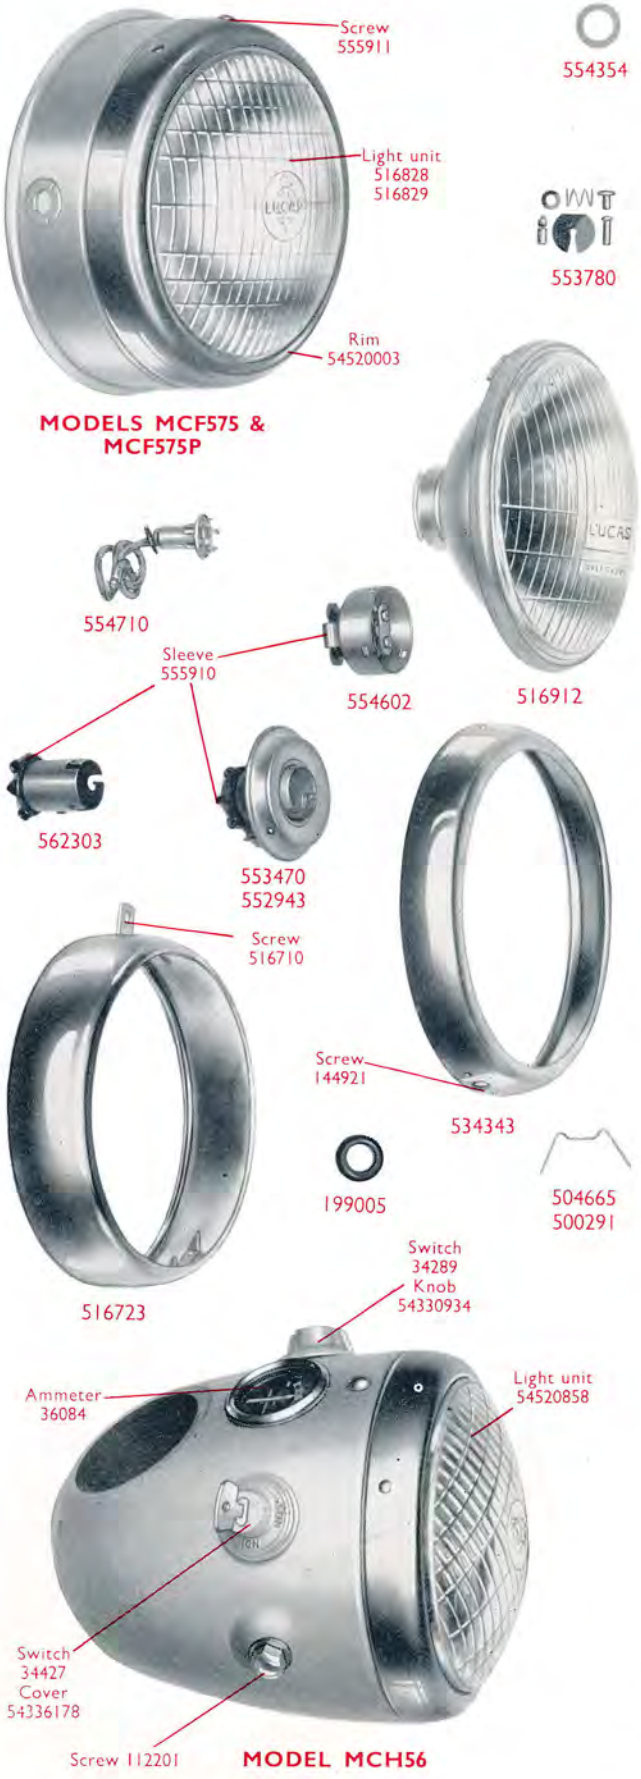

www.bsaunitsingles.com

MODEL MCH61

MODEL MCH66

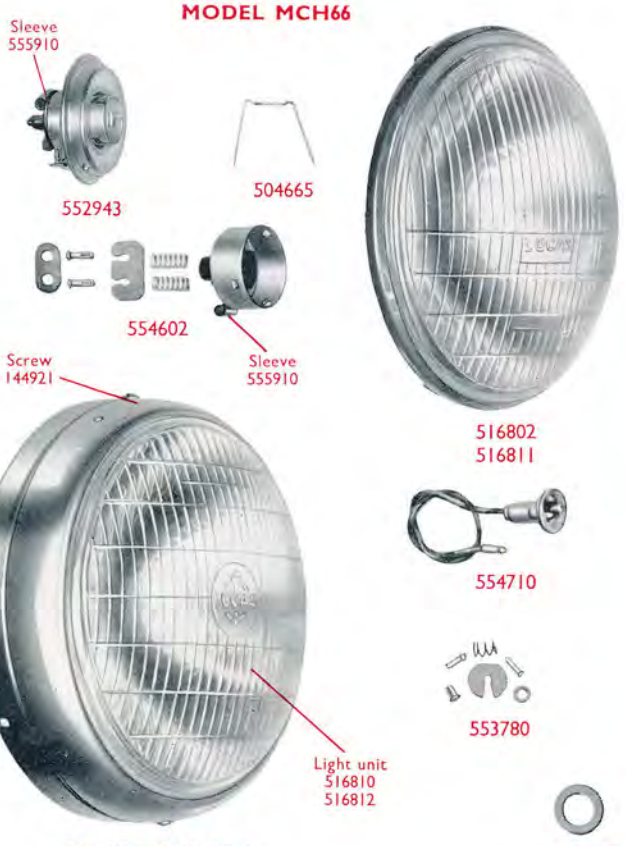

MODEL MCF700P

HEADLAMPS

MCH 61 models

Part No. / Model	59137A MCH61	59171A MCH61
Rim or door	553248	553248
Wire, fixing light unit	504665	504665
Screw, fixing rim	144921	144921
Ammeter	¶36296	¶36296
Switch, lighting	34289	34289
Knob, lighting switch	54330934	54330934
Screw, fixing knob	101371	101371
Switch, ignition	34427	34427
Key, ignition	54336176	54336176
Light unit	516798	516798
Bulbholder, main	—	554602
Sleeve, terminal	555910	555910
Bulbholder, pilot	554710	554710
Interior bulbholder	553780	553780
Ring, seating bulbholder	554354	554354
Screw, fixing lamp	112201	112201
Grommet, cable entry	—	199001
Bulb, main	312	312
Bulb, pilot	988	988

MCH 66 model

Part No. / Model	58395F MCH66
Rim or door	534343
Wire, fixing reflector	504665
Screw, fixing rim	144921
Switch, lighting	31356
Switch, dip	31620
Light unit	54520452
Bulbholder, main	554602
Sleeve, terminal	555910
Screw, fixing lamp	112201
Grommet, cable entry	199003
Bulb, main	166

MCF 700P models

Part No. / Model	59140A MCF700P	59141A MCF700P	59142A MCF700P
Rim or door	553248	553248	553248
Wire, fixing light unit	504665	504665	504665
Screw, fixing rim	144921	144921	144921
Light unit	516812	516810	516811
Bulbholder, main	554602	554602	554602
Sleeve, terminal	555910	555910	555910
Bulbholder, pilot	554710	554710	554710
Interior, bulbholder	553780	553780	553780
Ring, seating bulbholder	554354	554354	554354
Bulb, main	373	312	403
Bulb, pilot	988	988	988

Part No. / Model	59143A MCF700P	59174A MCF700P
Rim or door	553248	553248
Wire, fixing light unit	504665	504665
Screw, fixing rim	144921	144921
Light unit	516802	516812
Backshell	552943	—
Bulbholder, main	†562303	554602
Sleeve, terminal	555910	555910
Bulbholder, pilot	554710	554710
Interior bulbholder	553780	553780
Ring, seating bulbholder	554354	554354
Bulb, main	—	446
Bulb, pilot	988	989

† Part of 552943 ¶ See page 5 for details

www.bsaunitsingles.com

FLASHER LAMP

Part No. / Model	53733D 628
Lens	535901
Nut, lens fixing	526567
Gasket, lens seating	535904
Sleeve, terminal	555910
Grommet, cable entry	199000
Bulb	317

FLASHER UNIT

Part No. / Model	35013A FL5
Screw, terminal	132464
Washer, terminal screw	185000

STOP TAIL, NUMBER PLATE AND REFLEX LAMPS

Part No. / Model	53394B 564	53432B 564	53454B 564
Lens	54576001	54576001	54576001
Nut, barrel, lens fixing	575219	575219	575219
Gasket, lens seating	575208	575208	575208
Grommet, bulbholder	575207	575207	575207
Bulbholder assembly shell	575209	575209	575209
Interior, bulbholder	573828	573828	573828
Grommet, cable	573825	573825	573825
Nut, lamp fixing	166014	166014	166014
Bulb	352	384	380

Part No. / Model	53972A/B L679
Lens	54572932
Screw, fixing lens	572289
Bulbholder, with reflector	54574348
Interior, bulbholder	573828
Gasket, seating lamp	54571677
Bulb	384

TAIL, NUMBER PLATE AND REFLEX LAMP

Part No. / Model	53825A 564
Lens	54576001
Nut, lens fixing	575219
Gasket, lens seating	575208
Grommet, bulbholder	575207
Shell, bulbholder	54571021
Interior, bulbholder	573832
Grommet, cable entry	573825
Nut, lamp fixing	166014
Bulb	205

HORNS

Part No. / Model	70164A/B 70169A/B 70178A 8H	70166A/B 70177A 8H
Bracket	54680850	—
Sundry parts set	54681085	54681085

MODEL 628

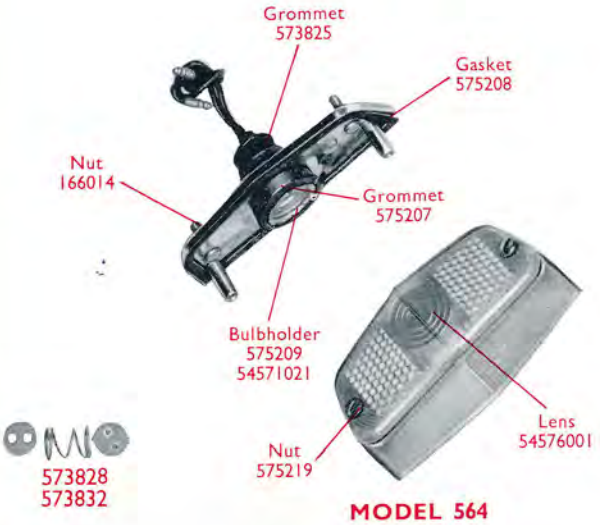

MODEL 564

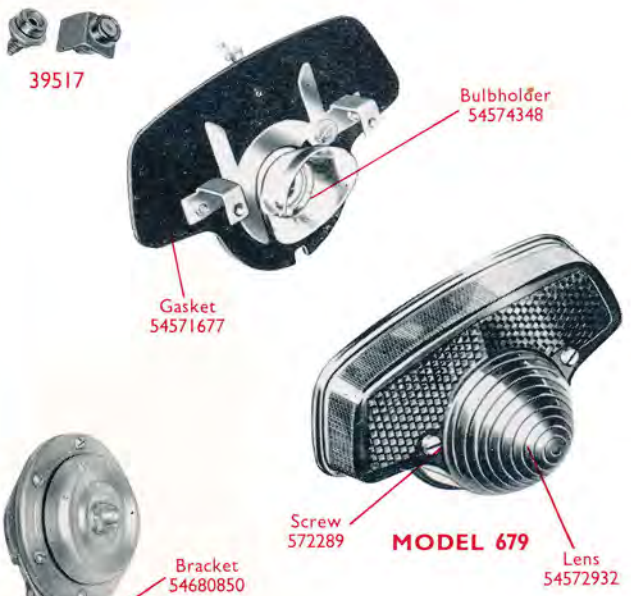

MODEL 679

MODEL 8H

www.bsaunitsingles.com

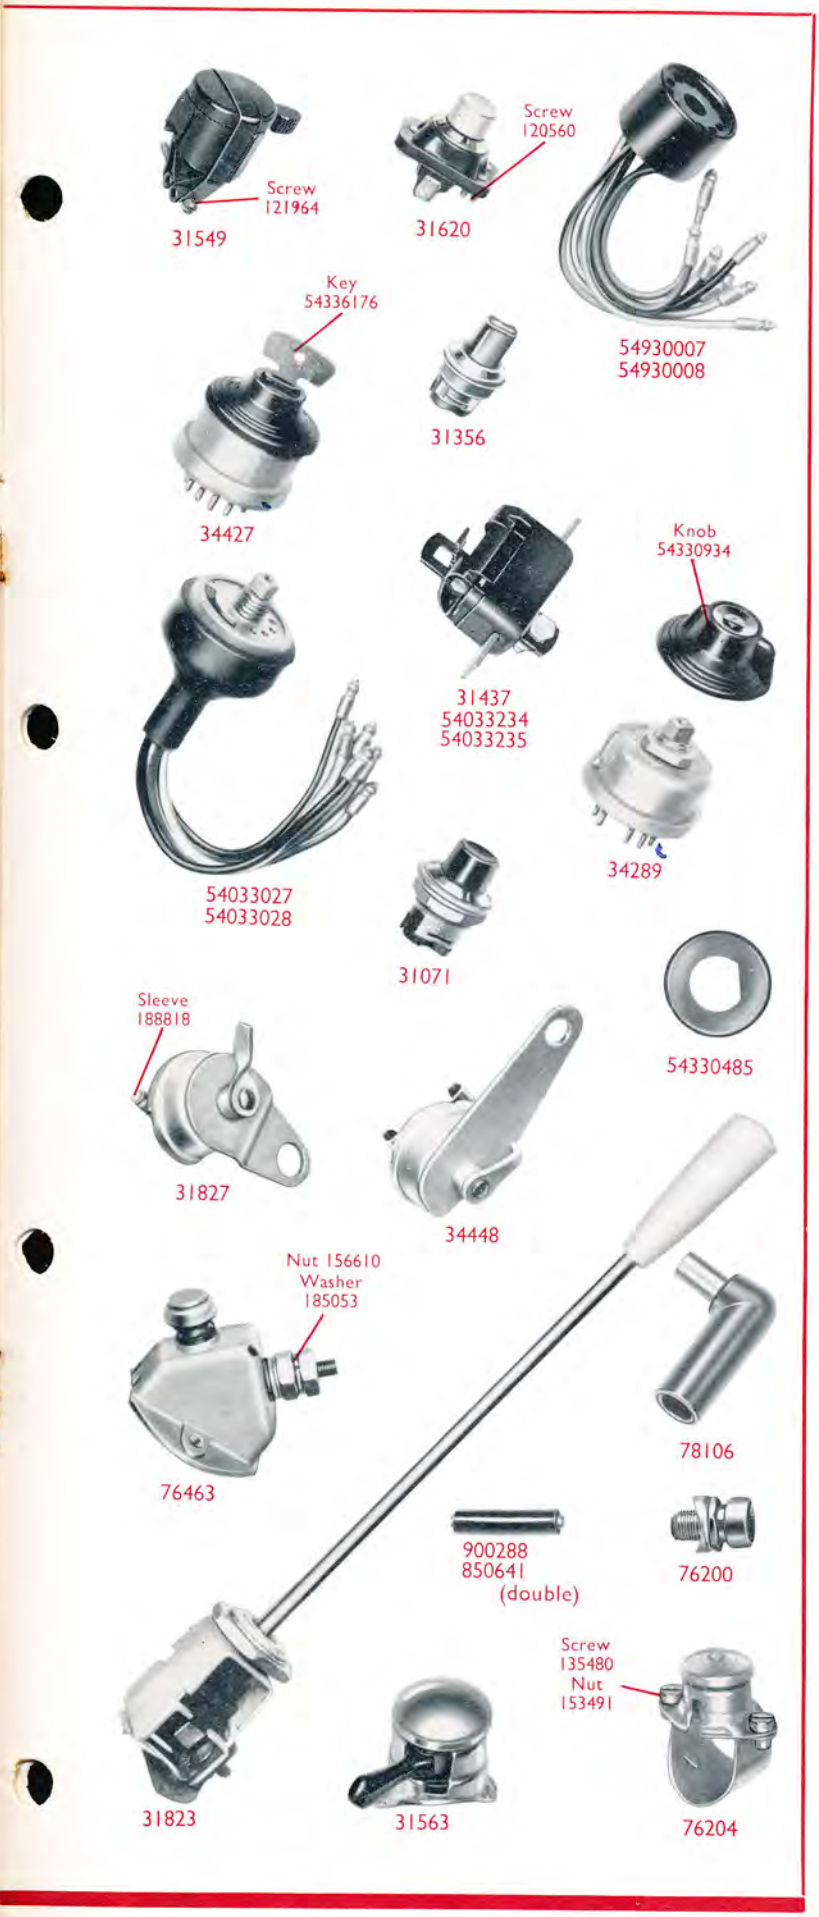

DIPPER SWITCHES

Part No. / Model	31549B 99	31620E PS9
Screw, fixing	121964	—
Screw, terminal	—	120560

IGNITION SWITCHES

Part No. / Model	34427A 88SA	54033027 63SA
Key	54336176	—
Connector	—	900269
Connector, tube, single	—	900288
Connector, tube, double	—	850641
Socket with cables	*54930008	—

Cover or knob (see Equipment Specification)

LIGHTING SWITCHES

Part No. / Model	31356A/B PS6	34289A 88SA	54033028 63SA
Screw, terminal	121610	—	—
Connector	—	—	900269
Connector, tube, single	—	—	900288
Connector, tube, double	—	—	850641
Socket with cables	—	*54930007	—

Knob (see Equipment Specification)

STOP LAMP SWITCHES

Part No.	31437B 54033234	31827A	34448A/B
Model	22B	6SA	6SA
Sleeve, terminal	—	188818	188818

SWITCH, STARTING

Part No. / Model	76463A 4SA
Nut, terminal	156610
Washer, spring	185053

CUT-OUT SWITCH

Part No. / Model	31071D SS5
Screw, terminal	120584

HORN PUSH AND DIPPER SWITCH

Part No. / Model	31563D 25SA
Screw, terminal	120610

HORN PUSH or MAGNETO CUT-OUT

Part No. / Model	76204D 4A
Screw, terminal	119520
Screw, fixing	135480
Nut, fixing	153491

* Order separately

www.bsaunitsingles.com

WARNING LIGHTS

Part No. / Model	38193A WL13	38194A WL13
Window	319303	319304
Bulbholder	554734	554734
Bulb	990	990

Part No. / Model	38197E WL13	38198E WL13
Cover and window	54332598	54332598
Bulbholder	554734	554734
Bulb	987	998

BULBS

Part No.	Volts	Watts	Description
166	6	24/24	Transverse, vertical dip
205	6	6	Coil, miniature bayonet cap
282	6	·6	Coil, miniature bayonet cap
312	6	30/24	Transverse, vertical dip
317	6	18	Transverse
350	12	35/35	Transverse, vertical dip
352	6	18/3	Transverse, offset pin
373	6	30/24	Transverse, dip left
377	6	25/25	Transverse, vertical dip
380	12	21/6	Transverse, offset pin
384	6	18/6	Transverse, offset pin
403	6	35/35	Bow, hooded axial
425	12	24/24	Transverse, vertical dip
446	12	50/40	Transverse, vertical dip
987	12	2·2	Bow, miniature screw cap
988	6	3	Coil, miniature bayonet cap
989	12	6	Coil, miniature bayonet cap
990	6	3	Bow, miniature screw cap
998	6	0·1 amps	Bow, miniature screw cap

CABLE HARNESSES

Part No.	54932231	54932234	54932262
Connector, Lucar, double (17.5 amp)	54942747	—	54942747
Connector, Lucar (17.5 amp)	54942078	54942078	54942078
Nipple	900269	900269	900269
Connector tube (2-way)	900288	900288	900288
Connector tube (4-way)	850641	850641	—

Part No.	54932275	54933943	54933944
Connector, Lucar, double (17.5 amp)	54942747	—	—
Connector, Lucar (17.5 amp)	54942078	54942078	54942078
Lucar blade	—	864980	864980
Nipple	900269	900269	900269
Connector tube (2-way)	900288	900288	900288
Connector tube (4-way)	—	850641	850641
Bulbholder (Speedo)	54941458	—	—
Bulb	282	—	—

Part No.	54935006	54941657
Connector, Lucar, double (17.5 amp)	54942747	—
Nipple	900269	900269
Connector tube (2-way)	900288	900288
Connector tube (4-way)	850641	850641

Part No.	54934657	54934952	54934998
Connector, Lucar, double (17.5 amp)	54942747	54942747	54942747
Connector, Lucar (17.5 amp)	54942078	—	54942078
Nipple	900269	900269	900269
Connector tube (2-way)	900288	900288	900288
Connector tube (4-way)	—	—	850641

www.bsaunitsingles.com